 


Safety Instructions

 
This product shall only be connected to a power supply rated at 5V DC, and maximum current of 1200mA. Any external power supply used with the TicerThing shall comply with relevant regulations and standards applicable in the country of intended use.

Please keep away from liquid and water spillage, areas with high humidity. This is a Wi-Fi Radio device and it is sensitive to shocks and falling.

Package Contents

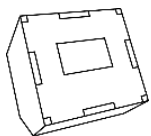

1 x TicerThing Bitcoin Companion



1 x USB to Micro USB Cable



1 x User Guide

WARNINGS



WARNING:

To reduce the risk of fire or electrical shock, do not expose the product to water or moisture



WARNING:

Do not expose this ticker to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard



WARNING:

Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions



WARNING:

Do not subject battery pack to mechanical shock. For battery replacement, please contact TicerThing Support

CAUTION:

Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance.

 


R206-000509

www.ticrthing.com

support@ticrthing.com

© 2017 TicerThing. All rights reserved

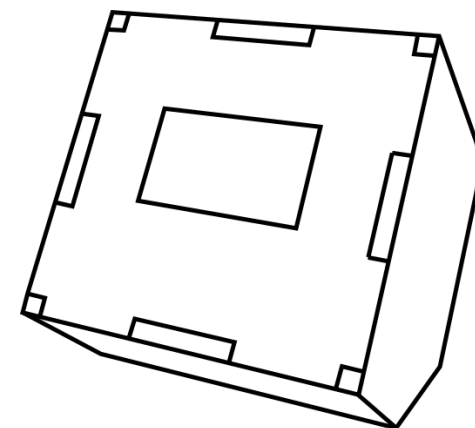

This User Guide

Please read this user guide carefully. The latest version of this guide you can find at: <http://www.ticrthing.com/guide.html>
If you encounter any problems, please mail us at: support@ticrthing.com

Specification

Price polling frequency: configurable between 30 seconds and 60 minutes

 
Adjustable Screen: flash for drastic rate changes
2 Modes of performance- Configuration and Operational modes, Wi-Fi 802.11 b/g/n

Compatible with: PC, Android, Nokia Phone

Required Software for configuration: standard browser (Firefox, Google Chrome, Internet Explorer/Edge, Opera)


First Use

Before you use the TicrThing for the first time, you need to configure it to use a Wi-Fi network. You would also want to configure additional settings, such as the currency pair to display, the price sensitivity, poll frequency, etc. All this is done through the configuration mode.

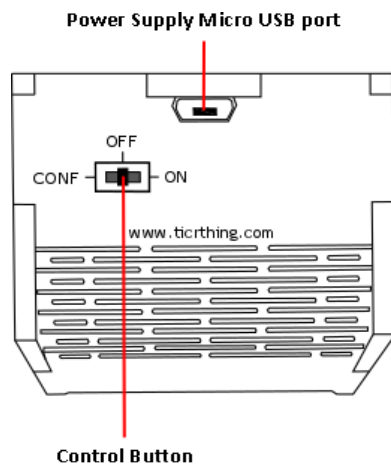

Configuration Mode

 
Find the slide switch on the backside wall of the TicrThing and move it to “CONF” to activate configuration mode.



1. The TicrThing creates a local Wi-Fi network and displays its SSID and PASS on the screen. It also displays the currently SAVED network (which is empty on first use).
2. Using your smartphone or laptop, look for the Wi-Fi network with the same SSID as the one on your TicrThing's display (for example: “TicrThing1234”). Note that the created Wi-Fi network has no internet access, as it is created only for configuration purpose.
3. Connect your device to the network access point created by TicrThing using the password printed on the display. Wait until your device is connected to that network.
4. Once your device is connected to TicrThing's Wi-Fi network, use your browser to navigate to the following IP address: “192.168.4.1”.
5. To show that your request has been registered correctly, the TicrThing will display the message “LINKED”. Your browser will then load TicrThing's configuration page. This page contains all settings you need to configure your TicrThing.
6. You can now fill in the SSID and Password of your home/office/mobile network to which your TicrThing will connect. Note that these SSID and Password are not those displayed by the TicrThing in the previous steps.
7. Customize the operation of your TicrThing by selecting desired currency pair, denomination, market, poll frequency, price sensitivity and your local time zone.
8. To save the entered information, click on the button “Save changes”. Note that the button is only available when the configuration page has fully loaded.
9. A new page acknowledges the information received by your TicrThing. The display of your TicrThing will start flashing, acknowledging that the configuration has been updated.
10. Turn off the TicrThing by sliding the switch on the back to position “OFF”. Your TicrThing is now configured with the settings you have entered.


Operation Mode

 To start the normal operation mode, switch the slider to position “ON”.



1. The TicrThing will attempt to connect to the Wi-Fi network you have configured. During this process dashes “-” are displayed on the screen.
2. Once the TicrThing connects to your local Wi-Fi network, it will display “updating”, which indicates it is polling the price from the exchange you have configured.
3. The polled price will then be displayed on the screen, together with the time of this update and the price change since last update.
4. The TicrThing then goes in sleep mode until the next price update. It repeats the above process automatically until you switch it off.

 Display Interface

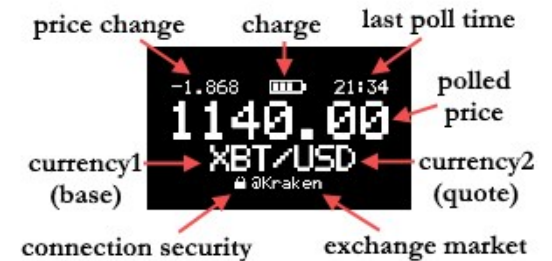

A closed lock in the connection security symbol signifies that the connection to the specified exchange market is secure (HTTPS) because its certificate matches with the one stored on this device. An open lock symbol means that the market communicates over unsecured connection (HTTP), or that the TicrThing could not verify the signature of the secure connection. The latter can happen, for example, if the webpage has issued a new certificate.